


# Wireless Telephone Quick Reference Guide

## Toshiba Strata DK/CTX

### 2020-SD Station Set

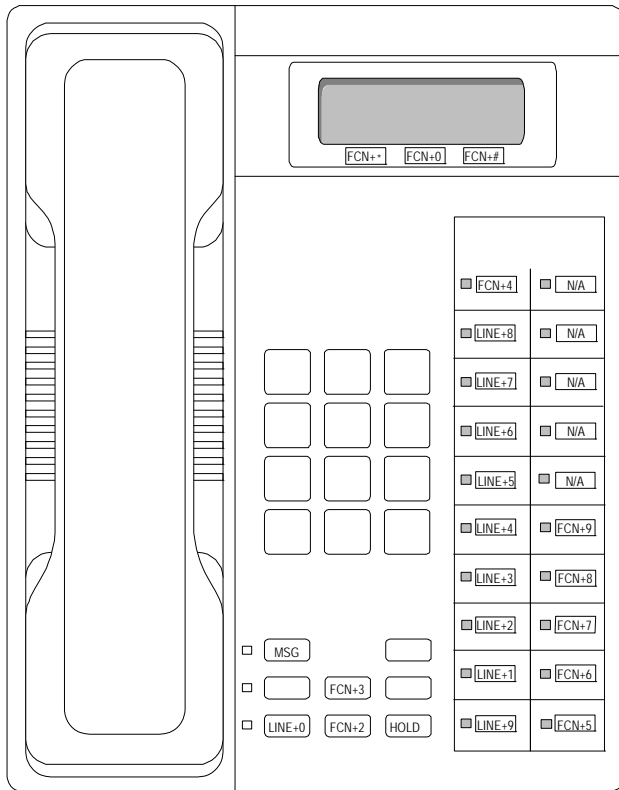


### 2020-SD Station Set

The figure above shows the mapping of the 2020-SD display set to the SpectraLink Wireless Telephone

Pressing **LINE** followed by a digit (**1-8**) on the Wireless Telephone is equivalent to pressing one of the line keys on the 2020-SD. **LINE** followed by **9** accesses the intercom.

**FCN** followed by digits **1** through **9** accesses the programmable desk set feature keys as seen in the chart below. **FCN** followed by **\***, **0** and **#** are equal to using the 2020-SD soft keys below the LCD screen.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	CNF.XFER	
FCN + 3	REDIAL	
FCN + 4	MSG	
FCN + 5	FWD	
FCN + 6	SPEED	
FCN + 7	PICK	
FCN + 8	PAGE	
FCN + 9	EXIT MENUS	
FCN + *		
FCN + 0		
FCN + #		

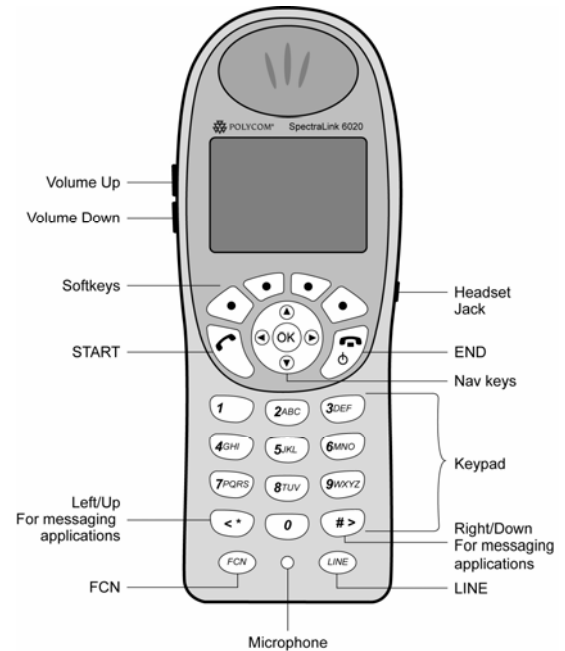

### SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

